


Retrofitting or Replacing a PM3 or PM4 on a Model C Indoor Rower

Performance Monitor Assembly

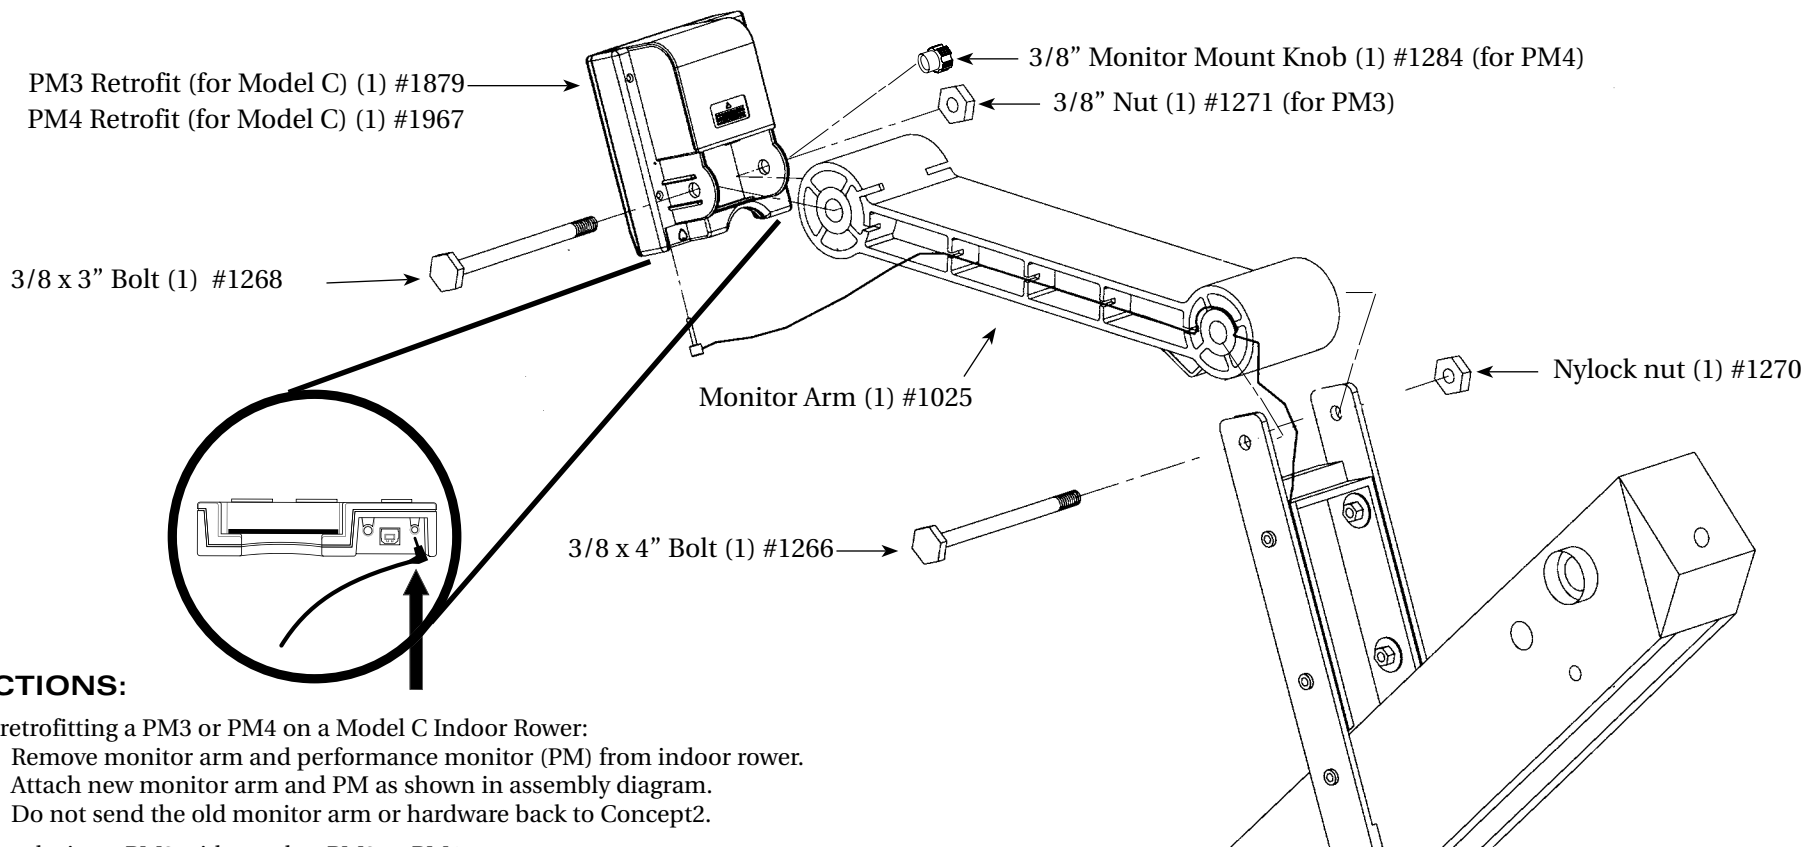

INSTRUCTIONS:

1. If you are retrofitting a PM3 or PM4 on a Model C Indoor Rower:
 - a. Remove monitor arm and performance monitor (PM) from indoor rower.
 - b. Attach new monitor arm and PM as shown in assembly diagram.
 - c. Do not send the old monitor arm or hardware back to Concept2.
2. If you are replacing a PM3 with another PM3 or PM4:
 - a. Unplug monitor wire from PM and see assembly diagram.

Note: The performance monitor has been factory-programmed to prevent possible battery drainage during shipping. To restore power, perform ONE of the following procedures:

1. Insert and remove the LogCard into the PM. A standard credit card will also work.
2. Plug in the pickup cable from your indoor rower and pull on the handle.

Troubleshooting:

If the PM malfunctions or does not "wake up," reset PM:

- Insert a pen/pencil tip into the reset hole on the back and press lightly.
- Remove the batteries for 30 minutes and insert two new alkaline D-cell (LR20) batteries.